



Voice Select (GRAY)
Voice 1: selected if wire is not grounded.
Voice 2: selected if connected to ground.

High Frequency Tilt (BLUE)
To activate, connect to ground.

Preamp Output (ORANGE)
Connect to Volume pot.

Ground (BLACK)
Connect to pot & bridge ground.

Battery + (RED)
Connect to battery positive terminal.

Preamp input (YELLOW)
Connect to 5-way switch pole.

Coil output (WHITE)
Connect to 5-way switch.

For best performance, insulate any wire that is not used.