



## Step 1: Endpin Jack Installation

Widen the endpin hole to  $\frac{15}{32}$ " (11.9mm) to accommodate the endpin output jack. [Refer to Endpin Jack installation guide](#) for further details.

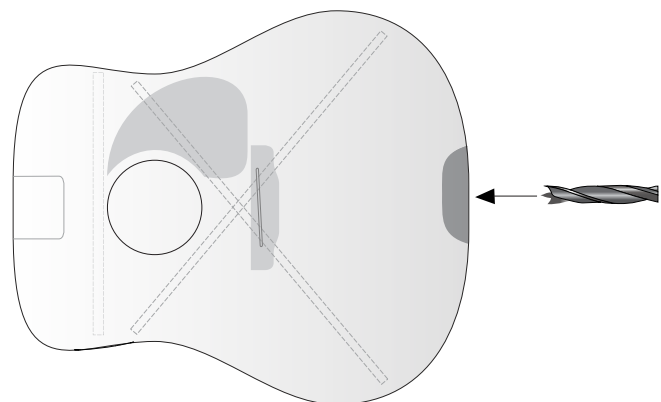


## Step 2: Sonicore Pickup Installation

Drill a  $\frac{3}{32}$ " hole (2.4mm) in the saddle slot for the pickup wire, no less than  $\frac{1}{10}$ " (2.5mm) from nearest string. [Refer to Sonicore installation guide](#) for further details.

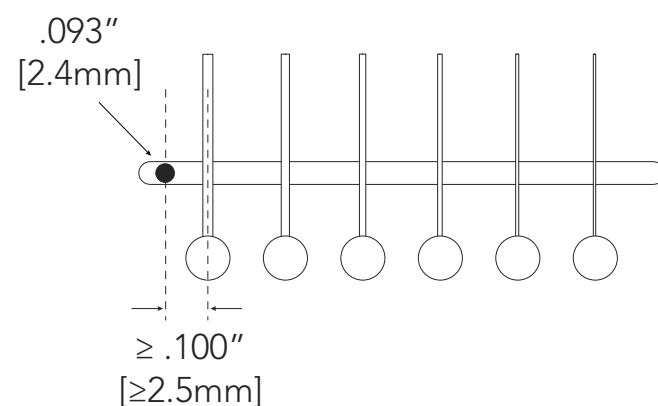

## Step 3: Preamp Location

Position the preamp on the flat-test convenient surface on the side of the instrument that also allows internal clearance. Cut out cavity for preamp using supplied template.

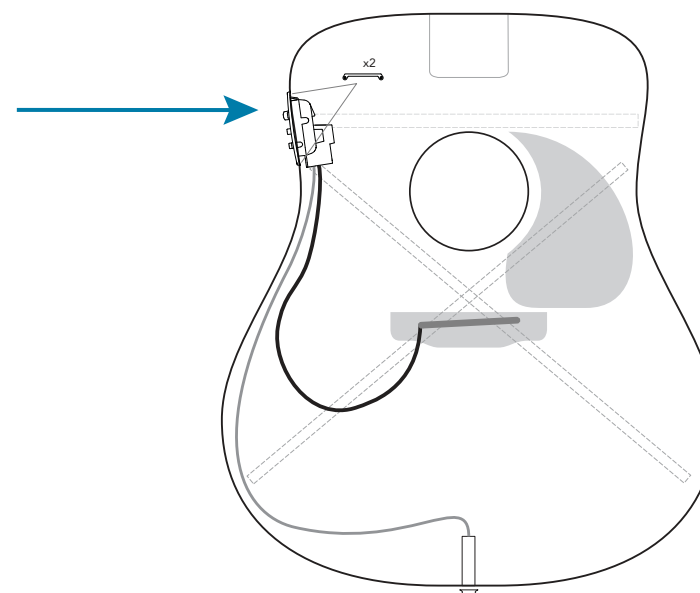

## Step 4: Attach Preamp

Attach the preamp to the guitar using the supplied screws and mounting brackets.

